Installations instruction

Part-No.: ns1574.3

ARAT Special display mount for Navigation Systems

for **TomTom GO 510, 710, 910**

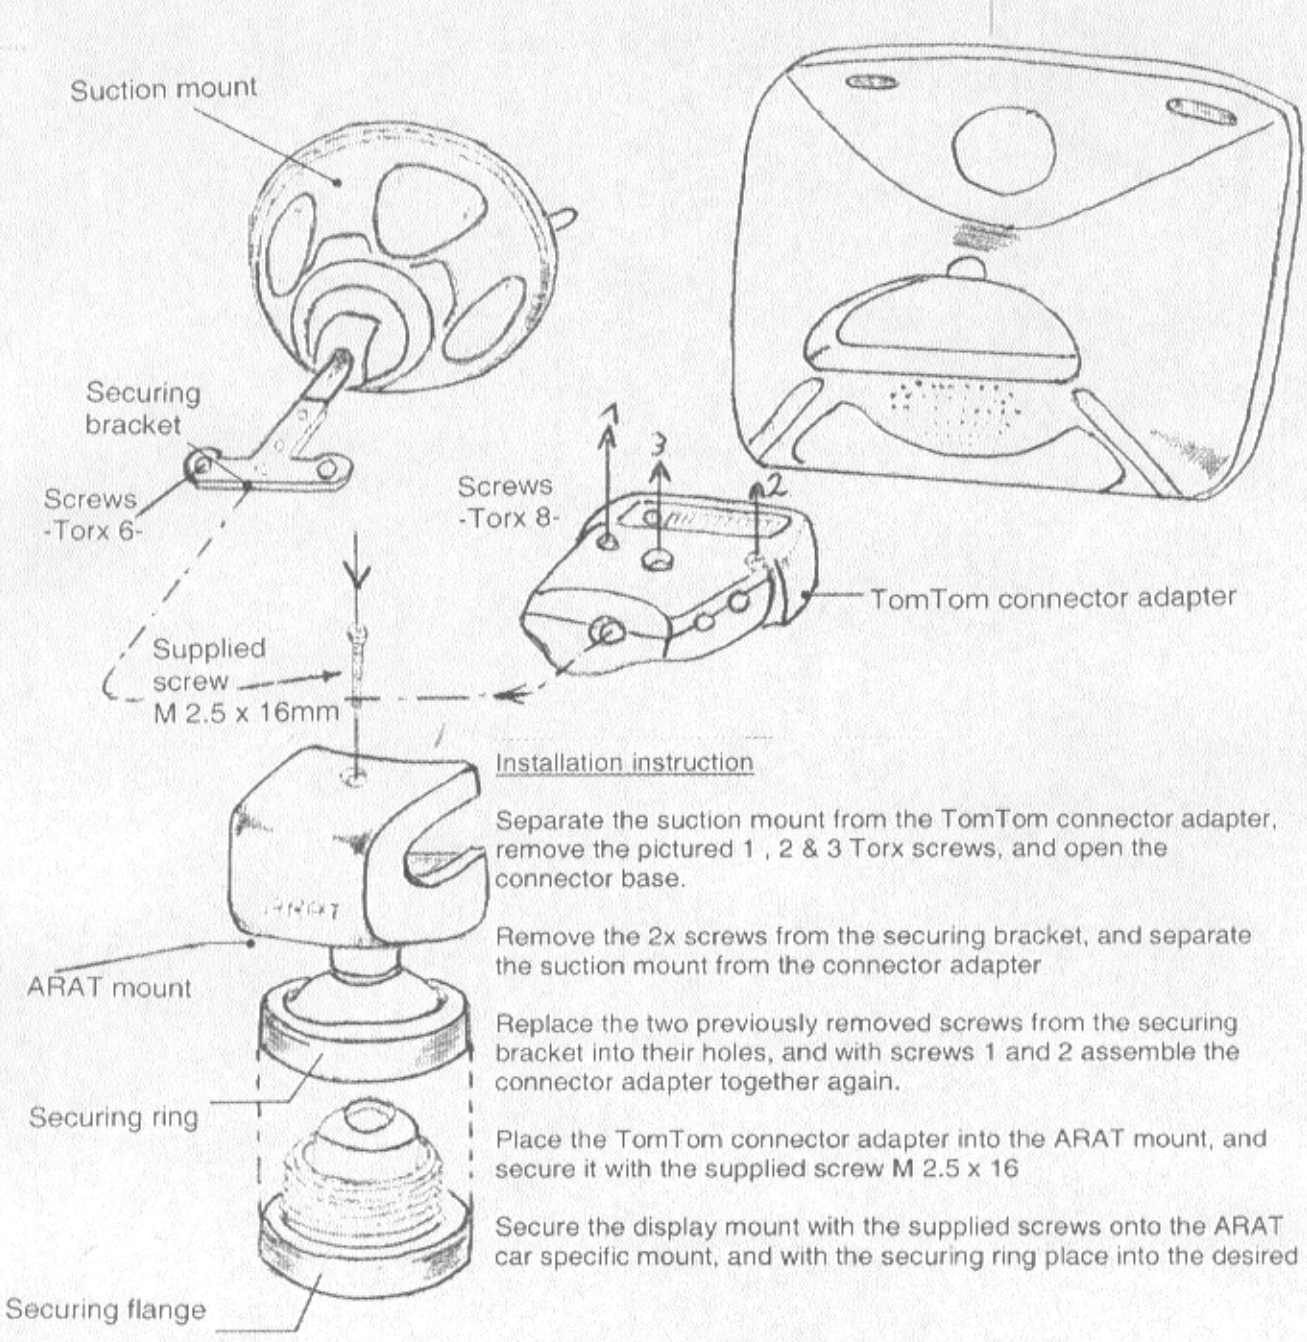

Installation instruction

Separate the suction mount from the TomTom connector adapter, remove the pictured 1 , 2 & 3 Torx screws, and open the connector base.

Remove the 2x screws from the securing bracket, and separate the suction mount from the connector adapter

Replace the two previously removed screws from the securing bracket into their holes, and with screws 1 and 2 assemble the connector adapter together again.

Place the TomTom connector adapter into the ARAT mount, and secure it with the supplied screw M 2.5 x 16

Secure the display mount with the supplied screws onto the ARAT car specific mount, and with the securing ring place into the desired p

ARAT GmbH - Hauptstrasse 75 - D-33758 SH-Stukenbrock - Germany
Tel.: 0049-5207-8952-52 - Fax: 0049-5207-8952-68 - Email: info@arat.de - www.arat.de